


# Events Happen...

(in milliseconds)

I ♥ 1588<sup>SM</sup>

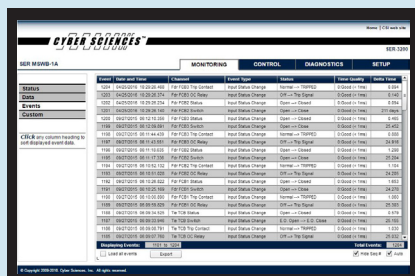

## Know what happened and when—to 1 ms

- Understand the root cause of every incident.
- Verify auto-controls operate as designed.
- Identify slow breakers before an arc flash hazard.

## PTP-enabled time sync over Ethernet:

(<100  $\mu$ s)

Set the first SER...

Ethernet

PTP Master

...all others sync automatically

PTP (IEEE 1588)

**CyTime™**  
Sequence of  
Events Recorder

No PTP?  
No Problem.

IRIG-B  
DCF77  
ASCII / RS-485

Time protocol output  
to meters and relays

32 digital inputs

Power Monitoring at the Speed of *NOW!*

**CYBER SCIENCES™**

www.cyber-sciences.com